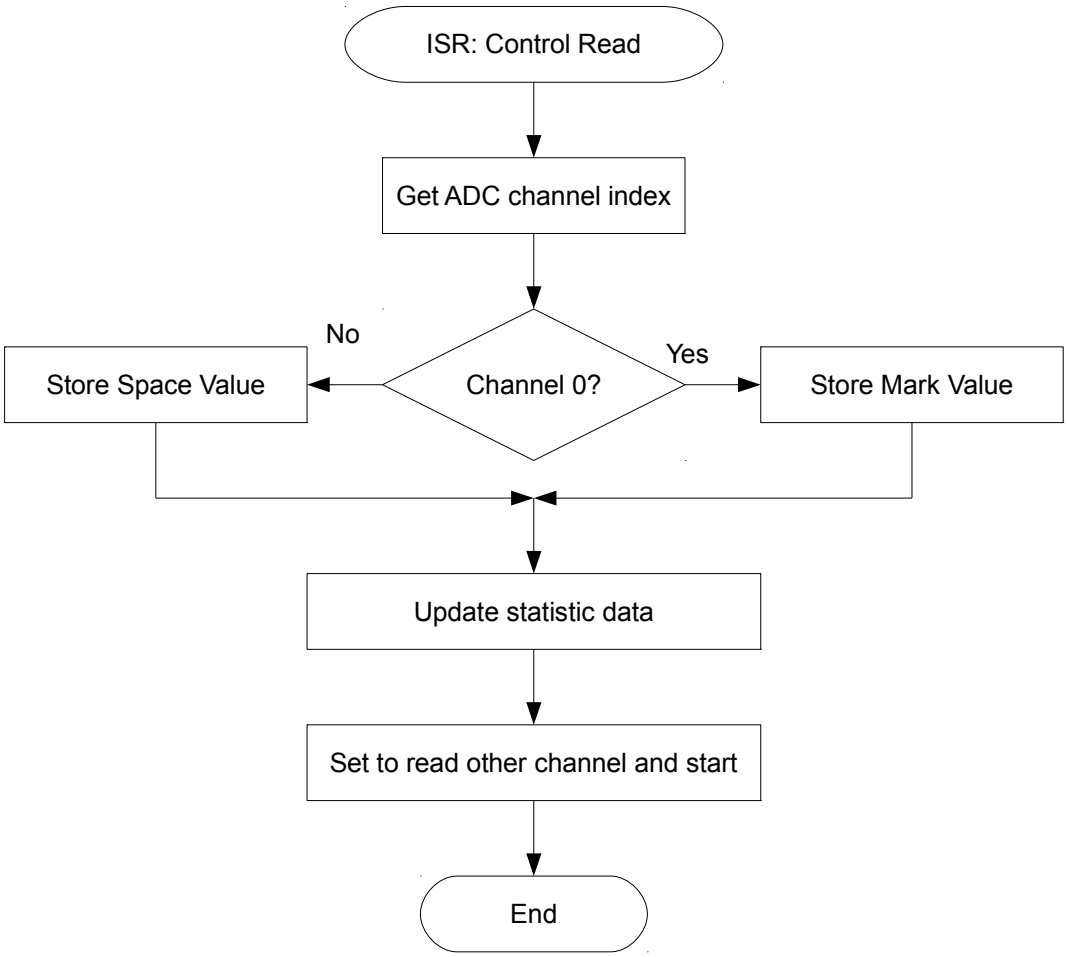
ISR: Control Read
Get ADC channel index
Channel 0?
No
Yes
Store Space Value
Store Mark Value
Update statistic data
Set to read other channel and start
End